


SECTION A - CORNER & FACE REPAIRS

N.T.S.

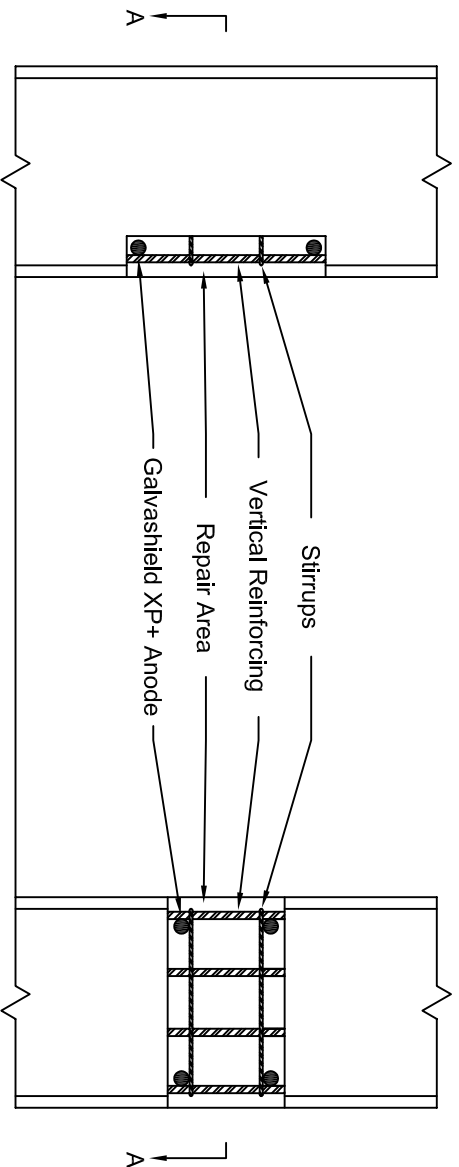

ELEVATION OF CORNER & FACE REPAIRS

N.T.S.

1. Remove damaged concrete as with standard repair methods.
2. Replace / clean corroded reinforcing steel.
3. Ensure all exposed reinforcing steel is securely fastened together with the wire to provide good continuity.

4. Attach Galvashield XP+ anodes to clean reinforcing steel at spacing outlined in contract specification. Refer to Galvashield XP+ data sheet for maximum spacing guidelines.

5. Pour back repair area with material as per contract specification.

GALVASHIELD XP+ INSTALLATION

COLUMN REPAIR

Drawn: J/M/H, Date: SEP 2004